

General Safety Information

WARNING – To avoid serious injuries:

Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

NOTE:

Parts are not guaranteed against natural wear or deterioration resulting from normal use.

These service instructions are printed on recycled paper.
Please note: Specifications are subject to change for improvement without notice.
(English)

SHIMANO AMERICAN CORPORATION

One Holland Irvine CA 92618 U.S.A. Phone 949-951-5003

SHIMANO EUROPA

Industrieweg 24 NL-8071 CT Nunspeet, Holland Phone 31-341-272222

SHIMANO INC.

3-77 Oimatsucho, Sakai, Osaka, Japan Phone 072-223-3243

© Mar. 2003 by Shimano Inc. PIT. SZK. Printed in Japan

SI-SP41A


SIS-SP41

Outer Casing

Technical Service Instructions



Installation of the outer cap

Use the cable cutter (TL-CT10) to cut the SIS-SP41 outer casing.

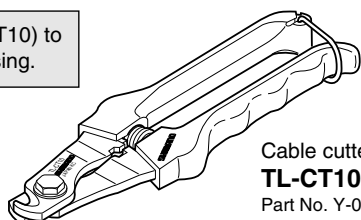


Cable cutter
TL-CT10
Part No. Y-098 00010

1. Use the cable cutter to cut the outer casing to the necessary length.
2. After cutting, use the section A of the cable cutter to correct the distortion of the outer casing.

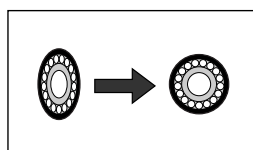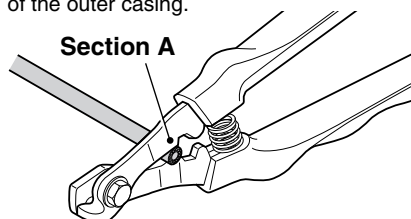

3. Insert the outer casing into the outer cap (sold separately) until it is securely touching the inside end of the outer cap.

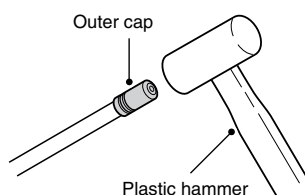

Outer cap (6 mm in diameter),
sold separately

Normal type
Part No. Y-6ZA 98010

Sealed type
Part No. Y-6Z2 98010

If the outer cap is not securely installed to the outer casing, the SIS might not operate properly.

Normal outer cap

Sealed outer cap

Contact

Contact

