FC-3301 FC-3304

Front chainwheel

# **General Safety Information**

## A WARNING

- Be careful not to let the cuffs of your clothes get caught in the chain while riding, otherwise you may fall off the bicycle.
- Check that the tension of the chain is correct and that the chain is not damaged. If the tension is too weak or the chain is damaged, the chain should be replaced. If this is not done, the chain may break cause serious injury.
- Check that there are no cracks in the crank arms before riding the bicycle. If there are any cracks, the crank arm may break and you may fall off the bicycle.
- Obtain and read the service instructions carefully prior to installing the parts. Loose, worn, or damaged parts may cause injury to the rider. We strongly recommend only using genuine Shimano replacement parts.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

#### Note

- Be sure to use only the FC-3301 / FC-3304 chainrings. If any other type of chainrings are used, the distance between the chainrings will be incorrect and the chain might slip off and get caught in between them.
- ${\scriptstyle \bullet}$  \*If the smaller chainring has 39 teeth, use B-52 or B-50 as the larger chainring.
- Be sure to use only the applicable chain and bottom bracket.
- Check that there is no looseness in any joints or connections before riding the bicycle. (BB-FC, FC-PD)
- If you feel any looseness in the bottom bracket axle, the bottom bracket should be replaced.
- In addition, if pedaling performance does not feel normal, check this once more.
- Do not wash the bottom bracket with high-pressure jets of water.
- Apply grease to the bottom bracket before installing it.
- To ensure the best performance, be sure to use only the specified type of chain. The wide type of chain cannot be used.
- If the chain keeps coming off the chainrings during use, replace the chainrings and the chain.
- You should periodically wash the chainrings in a neutral detergent and then lubricate them again. In addition, cleaning the chain with neutral detergent and lubricating it can be an effective way of extending the useful life of the chainrings and the chain.
- Parts are not guaranteed against natural wear or deterioration resulting from normal use.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.

# Specifications

#### Front Chainwheel

 
Model number	FC-3301	FC-3304
SG chainwheel teeth *	B-52 / 39T, B50 / 39T	52 / 42 / 30T
Bolt circle diameter	130 mm	130 / 74 mm
Crank arm length	165, 170, 175 mm	165, 170, 175 mm
Pedal threads	B.C. 9/16" x 20T.P.I. (English thread)	
Applicable chain	CN-HG50	
Applicable bottom bracket	BB-ES30	


#### **Bottom Bracket**

Model number	BB-ES30	
Туре	Double	Triple
Spindle length	113 mm	118 mm
Chain line	43.5 mm	45 mm
Shell width (Thread dimensions)	68 mm (1.37 X 24 T.P.I.) 70 mm (M36 X 24 T.P.I.)	

## Installation of the front chainwheel

- 1. Place the crank arm onto the bottom bracket spindle so that it meshes with the serrations on the spindle.
- 2. Install the washer and fixing bolt and tighten the fixing bolt.




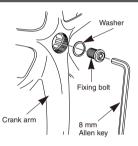

# Replacing the front chainwheel

Use the special plug tool (TL-FC15) to remove the FC-3301 / FC-3304 crank arm.

 
- 1. Turn the crank arm fixing bolt counterclockwise to remove the screw.
- 2. Insert the TL-FC15 into the hole of the bottom bracket axle.
- 3. Then, screw the cotterless crank arm extractor (TL-FC10) into the crank arm, and then remove the crank arm in the same way as normal.



## Installation of the Bottom Bracket

Use the special tool (TL-UN74-S) to install the bottom bracket. First install the main body, then the adapter.

Adapter/bottom bracket tightening torque: 50 - 70 N·m {435 - 608 in. lbs.}

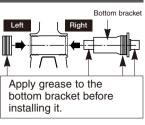


## Installation of the chainrings

Smooth shifting will not be possible if the chainrings are incorrectly installed, so be sure to install the chainrings in the correct positions.

For both the large and small chainrings, the surfaces that have the tooth number marking should face outward.

Install so that the markings are in the positions shown in the illustration.

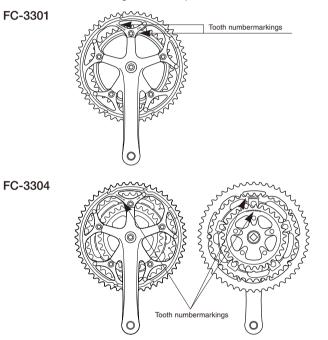

For the FC-3304, the tooth number marking on the largest chainring should face outward, and the markings on the intermediate and smallest chainrings should face inward.



 SHIMANO AMERICAN CORPORATION

 One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

 SHIMANO EUROPE HOLDING B.V.

 Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

 3-77 Oimatsu-cho, Sakai, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English) @ Jun. 2004 by Shimano Inc. XBC SZK Printed in Malaysia

