FD-4400

Front derailleur

General Safety Information

WARNING

- Obtain and read the service instructions carefully prior to installing the parts. Loose, worn, or damaged parts may cause injury to the rider.
- We strongly recommend only using genuine Shimano replacement parts.
- Be careful not to let the cuffs of your clothes get caught in the chain while riding, otherwise you may fall off the bicycle.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference

Note

- If gear shifting operations cannot be carried out smoothly, clean the derailleur and lubricate all moving parts.
- If the amount of looseness in the links is so great that adjustment is not possible, you should replace the derailleur.
- When the chain is in the position shown in the illustration, the chain may contact the front chainrings or front derailleur and generate noise. If the noise is a problem, shift the chain onto the next-larger rear sprocket or the one after.





sprockets

• For smooth operation, use the specified outer casing and the bottom bracket cable guide.

· Grease the inner cable and the inside of the outer casing

- before use to ensure that they slide properly.
- Parts are not guaranteed against natural wear or deterioration resulting from normal
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.


In order to realize the best performance, we recommend that the following combination be used.

TIAGRA
ST-4400 / ST-R600 / SL-7700 / SL-R440
SP40
18
FD-4400
FC-4401
BB-ES51 / BB-ES30
RD-4400-SS
FH-4400
CS-HG50-9
CN-HG53
SM-SP17


Specifications Band type / Brazed on type Front derailleur installation band diameter S (28.6mm), M (31.8mm) 61° - 66° Chainstay angle (a) Chain line 43.5mm


Installation of the front derailleur

1. Adjust so that the clearance between the chain guide outer plate and the large gear is 1 - 3 mm before installing.

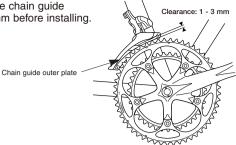

- 2. The level section of the chain guide outer plate should be directly above and parallel to the largest chainring.
- 3. Secure using a 5mm Allen key.

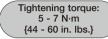

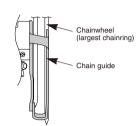


SIS adjustment

1. Low adjustment

Set so that the clearance between the chain guide inner plate and the chain is 0 - 0.5 mm.



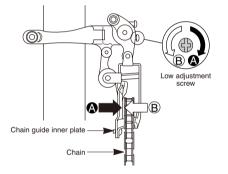


2. Connection and securing of cable

While pulling the inner cable, tighten the wire fixing bolt with a 5 mm allen key to secure the cable.




Tightening torque: 5 - 7 N·m {44 - 60 in. lbs.}


After taking up the initial slack in the cable, re-secure to the front derailleur as shown in the illustration.

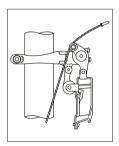

3. Top adjustment


Set so that the clearance between the chain guide outer plate and the chain is 0 - 0.5 mm.

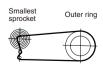

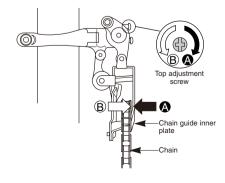


4. Adjustment of the cable tension

(1) Set the chain to the largest rear sprocket, and shift the front to top gear.

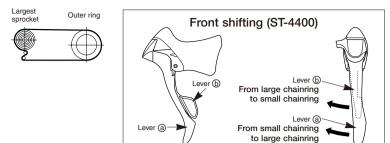

- (2) Perform the trimming.
- Trimming (noise-prevention mechanism)
 Gently press the lever ⑤.
 (A "click" sound will be heard.)
- (3) After trimming, adjust the clearance (by using the cable-adjustment bolt) of the chain and chain guide to the minimum (0 0.5 mm).

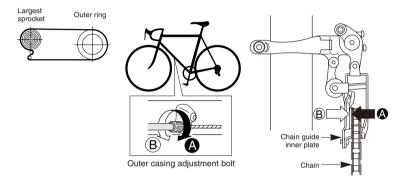

Be sure to read these service instructions in conjunction with the service instructions for the ST-4400 / ST-R600, SL-7700 / R440 before use.

SHIMANO

SHIMANO AMERICAN CORPORATION

One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE HOLDING B.V. Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222 SHIMANO INC.