



FD-R440A

Front derailleur

Before use, read these instructions carefully, and follow them for correct use.

⚠

WARNING

- Obtain, read and carefully service instructions when installing parts. A loose, worn, or damaged parts may cause injury to the rider.
We strongly recommend that only genuine Shimano replacement parts be used.

Note

- For smooth operation, use the specified outer casing and bottom bracket cable guide.
- Grease the inner cable and the inside of the outer casing before use to ensure that they slide properly.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.

In order to realize the best performance, we recommend that the following combination be used.


Shifting lever	Front	SL-R440
	Rear	SL-R440-8
Outer casing		SP40
Gears		16
Front derailleur		FD-R440A
Front chainwheel		FC-3300
Bottom bracket		BB-UN40
Rear derailleur		RD-3300
Freehub		FH-3300
Cassette sprocket		CH-HG50-8
Chain		CN-HG50
Bottom bracket cable guide		SM-SP17

Specifications


Type	Band type / Brazed on type
Front derailleur installation band diameter	S (28.6mm), M (31.8mm)
Chainstay angle (°)	61° - 66°
Chain line	43.5mm

Installation of the front derailleur

1. Adjust so that the clearance between the chain guide outer plate and the large gear is 1 - 3 mm before installing.

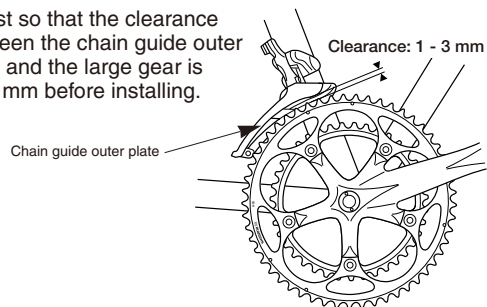

2. The level section of the chain guide outer plate should be directly above and parallel to the largest chainring.

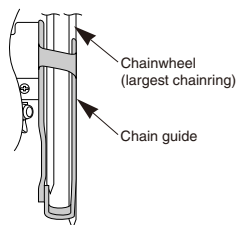



3. Secure using a 5mm Allen key.

Tightening torque:
5 - 7 Nm
{44 - 60 in. lbs.}

SIS adjustment


1. Low adjustment

 Set so that the clearance between the chain guide inner plate and the chain is 0-0.5 mm.

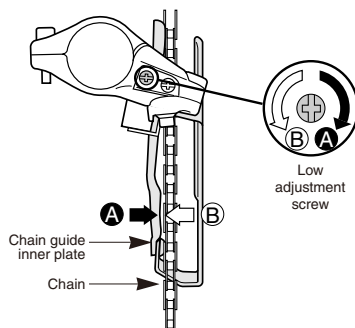


2. Connection and securing of cable

While pulling the inner cable, tighten the wire fixing bolt with a 5 mm allen key to secure the cable.

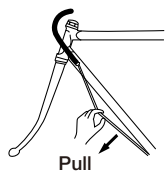



Tightening torque: 5 - 7 Nm
{44 - 60 in. lbs.}

After taking up the initial slack in the cable, re-secure to the front derailleur as shown in the illustration.

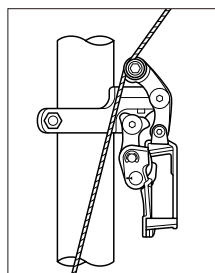


3. Top adjustment

 Set so that the clearance between the chain guide outer plate and the chain is 0-0.5 mm.

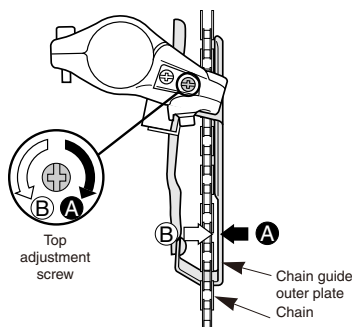

4. Adjustment of the cable tension

 - (1) Set the chain to the largest rear sprocket, and shift the front to top gear.




■ Front shifting (SL-R440)

Both lever (A) and lever (B) always return to the initial position when they are released after shifting. When operating one of the levers, always be sure to turn the crank arm at the same time.

To shift from a small chainring to a larger chainring

When lever (A) is pressed once, there is a shift of one step from a small chainring to a larger chainring.


Example: from intermediate chainring to largest chainring.

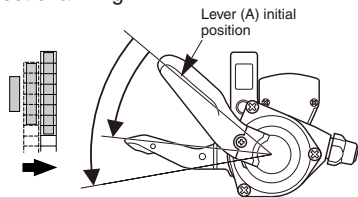

To shift from a large chainring to a smaller chainring

When lever (B) is pressed once, there is a shift of one step from a large chainring to a smaller chainring.

Example: from largest chainring to intermediate chainring.

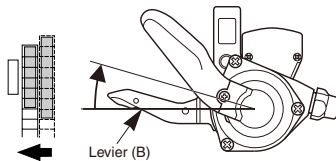




- (2) Perform the trimming.

■ Trimming (noise-prevention mechanism)

Gently press the lever (B). (A "click" sound will be heard.)

- (3) After trimming, adjust the clearance (by using the cable-adjustment bolt) of the chain and chain guide to the minimum (0-0.5mm).

Clearance:
0 - 0.5mm

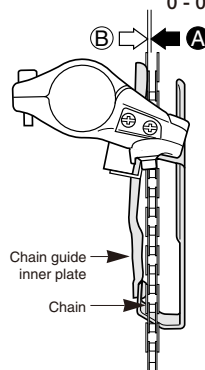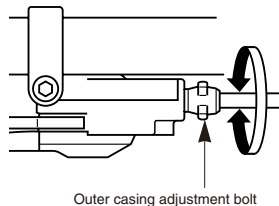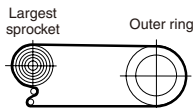

Be sure to read these service instructions in conjunction with the service instructions for the SL-R440 before use.

SHIMANO®

SHIMANO AMERICAN CORPORATION
One Holland Irvine CA 92618 U.S.A. Phone 949-951-5003

SHIMANO EUROPA

Industrieweg 24 NL-8071 CT Nunspeet Holland Phone 31-341-272222 77 Omatsu-cho 3-cho Sakai Osaka 590-8577 Japan Phone 0722-23-3243

SHIMANO INC.

Please note: specifications are subject to change for improvement without notice. (English)
© Oct. 2000 by Shimano Inc. XBC SZK Printed in Japan.

