

A-1



## TOOL


1. Hex Key
2. Clipper
3. C Clamp
4. Inner cable
5. Cable house
6. Screwdriver

A-2



Use Clipper to cut the cable end.

A-3

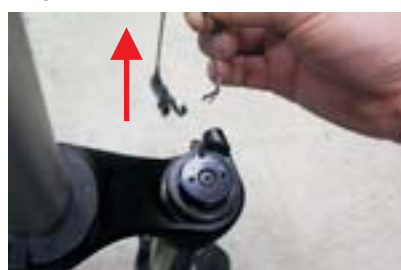

Pull out the inner cable assembly.

A-4



Remove the cable house.

A-5



Remove the inner cable.

A-6



Use Hex Key by turning counter clock-wise to loosen the screw.

A-7



Remove the top Knob.

A-8



Top cap and spring.

A-9



Remove the adaptor.

A-4



Remove the cable house.

A-5



Remove the inner cable.

A-6



Use Hex Key by turning counter clock-wise to loosen the screw.

A-10



Use 2.5mm Hex Key by turning counter clock-wise to loosen the bolt.

A-11



Remove the fixed guide.

A-12



1. RL Fixed guide
2. RL top cap
3. Spring
4. Bolt
5. Adaptor

B-1



1. RL Fixed guide
2. RL top cap
3. Spring
4. Bolt
5. Adaptor

B-2



Install the adaptor.

B-3



Installed the Fixed Guide.

B-4



Fixed Guide face front, use 2.5mm Hex Key by turning clock-wise to tighten the bolt.

B-5



Installed the Top cap and turning counter clock-wise until it stopped.

B-6



Then remove the top cap.

B-7



Then install the top cap vertically base on the fixed guide bolt , it allow 30 degree left to right tolerance. This would be your lockout position.

B-8



By turning clock-wise with 180 degree . Visual memorize the top cap screw position (or you can mark the screw position).

B-9



Then remove the top cap.

B-10



Installed the spring.

B-11



Install the spring pin into the spring hole.

B-12



Use hex key to install screw by turning clock-wise to tighten the top cap.

B-13



Install the inner cable through the RL control body.

B-14



Install the cable house through inner cable.

B-15



Push the Remote Lever.

B-19



Important - When you hold the inner cable tight, it better pull down.

B-20



Hold the inner cable tight , then use 1.5mm hex key by turning clock-wise to tighten the screw.

B-21



Cut the extra inner cable.

B-16



Install inner cable through fixed guide, then through the top cap and the hole on the top cap.

B-17



Hold the inner cable tight.

B-18



Use C clamp hold the 2 hole on the top cap, then hold the inner cable tight again.

B-22



Clamp the cable end.

B-23



Try to lockout , if it was unable to lockout, please adjust the adjuster on the lever.