

A-1



### TOOL

1. Hex Key
2. Screw driver
3. Hex Wrench
4. 20mm wrench
5. 22mm wrench
6. C Clamp

A-2



Adjust to Lockout position.

(FOR GILA. CAPA. NEON)

A-3



Use 4mm Hex Key by turning counter clock-wise to remove the bolt on the bottom of the fork (both side).

(FOR GILA. CAPA. NEON)

A-7



Use special Wrench (M5GAC616), by turning counter clock-wise to loosen the Lock out top cap.

(FOR GILA. CAPA. NEON)

A-8



Remove the Lockout Top cap assembly from the leg.

(FOR GILA. CAPA. NEON)


A-9



Use special Wrench (M5GAC616), by turning counter clock-wise to loosen the Spring top cap.

(FOR GILA. CAPA. NEON)

A-4

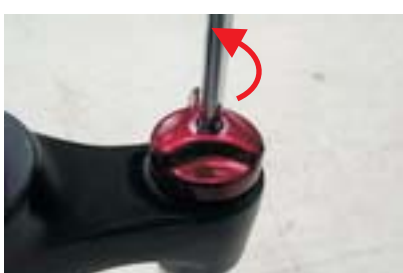

Use screw driver by turning counter clock-wise to loosen the screw on the Lockout Knob.

(FOR GILA. CAPA. NEON)


A-5



Remove the Knob and remove all the parts.

(FOR GILA. CAPA. NEON)

A-6

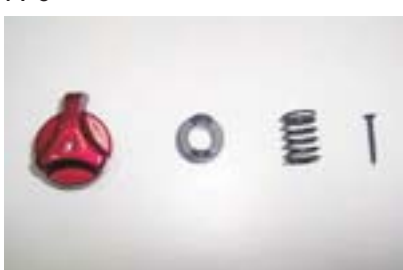

1. Lockout Knob
2. Knob Guide
3. Spring
4. Screw

(FOR GILA. CAPA. NEON)

A-10



Remove the spring assembly from the leg.

(FOR GILA. CAPA. NEON)

A-11



Separate the Crown assy. From the outer casting.

(FOR GILA. CAPA. NEON)

A-12



Use special Wrench (M5GAC616), by turning counter clock-wise to loosen the Spring top cap.

(FOR SOFI. TRENDY)

A-13



Remove the spring assembly from the leg.

(FOR SOFI. TRENDY)

A-14



Use a T shape 5mm Hex wrench into the inner leg by turning counter clock-wise to loosen.

(FOR SOFI. TRENDY)

A-15



Use screw driver by turning counter clock-wise to loosen the screw on the Lockout Knob.

(FOR SOFI. TRENDY)

A-19



Remove the Lockout Top cap assembly from the leg.

(FOR SOFI. TRENDY)

A-20



Use a T shape 4mm Hex wrench into the inner leg by turning counter clock-wise to loosen.

(FOR SOFI. TRENDY)

A-21



2 T shape Hex wrench for sofi and trendy.  
(4mm & 5mm).

(FOR SOFI. TRENDY)

A-16



Remove the Knob and remove all the parts.

(FOR SOFI. TRENDY)

A-17



1. Lockout Knob
2. Knob Guide
3. Spring
4. Screw

(FOR SOFI. TRENDY)

A-18



Use special Wrench (M5GAC616), by turning counter clock-wise to loosen the Lock out top cap.

(FOR SOFI. TRENDY)

A-22



Separate the Crown assy. From the outer casting.

(FOR SOFI. TRENDY)

A-23



Push Lockout cartridge out from the bottom of the inner leg.

(FOR ALL)

A-24



Remove the lockout cartridge from the top of the inner leg.

(FOR ALL)

A-25



Remove the spacer from the compression rod.

(FOR ALL)

A-26



Push the compression rod from the bottom of the leg.

(FOR ALL)

A-27



Remove the compression rod assembly from the inner leg. the leg.

(FOR ALL)

A-31



(FOR SOFI. TRENDY)

A-28



Use a 24mm Wrench by turning counter clock-wise to loosen the end cap.

(FOR ALL)

A-29



Remove the End cap from the leg.

(FOR ALL)

A-30



Photos and parts after disassembly the fork.

(FOR GILA. CAPA. NEON)



B-1



End cap (Gear)

(FOR ALL)

B-2



Install into the leg.

(FOR ALL)

B-3



Use 24mm Wrench by turning clock-wise to install the End cap.

(FOR ALL)

B-7



Use a special tool (M5GAC616) to tighten the preload adjuster.

(FOR GILA. CAPA. NEON)

B-8



Install the ML cartridge from the top of the inner leg.

(FOR GILA. CAPA. NEON)

B-9



Adjust the ML cartridge by turning counter clock-wise until the lockout position.

(FOR GILA. CAPA. NEON)

B-4



Install the compression rod assembly from the top of the inner leg.

(FOR GILA. CAPA. NEON)

B-5



Install the spacer into the compression rod.

(FOR GILA. CAPA. NEON)

B-6



Install the spring preload adjuster.

(FOR GILA. CAPA. NEON)

B-10



Install the Crown assembly into the outer leg.

(FOR GILA. CAPA. NEON)

B-11



Use 4mm Hex Key by turning clock-wise to tighten the bolt. (Please tighten the lockout side first).

(FOR GILA. CAPA. NEON)

B-12



look into the Lockout leg side has a cross.

(FOR GILA. CAPA. NEON)

B-13



Install the ML cartridge match the cross,by turning clock-wise until fully open.

(FOR GILA. CAPA. NEON)

B-14



Use 4mm Hex Key by turning clock-wise to tighten the bolt.

(FOR GILA. CAPA. NEON)

B-15



Install the Crown assembly into the outer leg.

(FOR GILA. CAPA. NEON)

B-19



Use a 5mm T shape Hex wrench to tighten.

(FOR SOFI. TRENDY)

B-20



Install the pre-load adjuster into the leg.

(FOR SOFI. TRENDY)

B-21



Use a special tool (M5GAC616) to tighten the preload adjuster.

(FOR SOFI. TRENDY)

B-16



Install the compression rod from the top of the leg.

(FOR SOFI. TRENDY)

B-17



Install the spacer into the compression rod.

(FOR SOFI. TRENDY)

B-18



Use a 4mm & 5mm T shape Hex Wrench to tighten.

(FOR SOFI. TRENDY)

B-22



Install the ML cartridge from the top of the inner leg.

(FOR SOFI. TRENDY)

B-23



Install the ML cartridge match the cross,by turning clock-wise until fully open.

(FOR SOFI. TRENDY)

B-24



Use a 4mm T shape Hex wrench to tighten.

(FOR SOFI. TRENDY)

B-25



Install the ML cartridge into the leg.

(FOR ALL)

B-26



Use a special tool (M5GAC616) to tighten the ML cartridge.

(FOR ALL)

B-27



1. Lockout Knob
2. Knob Guide
3. Spring
4. Screw

(FOR ALL)

B-31



Install the Knob assembly knob into the top cap cartridge.

(FOR ALL)

B-32



Push and hold the Knob assembly.

(FOR ALL)

B-33



Use the screwdriver to tighten the screw.

(FOR ALL)

B-28



Sub-assembly Lockout Knob and knob guide.

(FOR ALL)

B-29



Turning the Knob and knob guide.

(FOR ALL)

B-30



Install the spring.

(FOR ALL)

B-34



Try to turn the Knob to double check it can be turned freely. If it can not be turned, please push the fork then try again.

(FOR ALL)